









Bidet BA08-AR/AE

- This product can not be used if the voltage is different from that mentioned in the rating plate.
- For your safety and proper use of the product, please read this User's Manual before use.
- Warranty card is included in this User's Manual.





FEATURES

1. WIDE function

Users can select the degree of the cleansing water spreading directly as the wanted step from the strong force of the flowing water to the softly spreading water.



2. Air+ function

You can feel more soft and strong cleansing power as it is an air mixed water type.



3. Special function for the customer's convenience

 Power saving mode: If you don't operate the bidet body/ remote control button for 30 minutes without sensing the human body on the seat sensor, the body power selection indicator is turned off, and as the water/seat temperature is set as "Low" status, the amount of the power consumption is decreased.



- Remote control power saving mode: If you don't operate the remote control button for 30 minutes, as the remote control indicator window is turned off, the amount of the battery consumption of the remote control is decreased.
- **Silent mode**: The bell sound can be turned on/off according to customer preference.
- Seat sensor lock mode: As rear cleansing/front cleansing/air dryer will not work without
 the user sitting on the seat, it prevents the operating malfunctions due to children's
 unintended button inputs.

4. Auto cleansing function

With one button, you can operate the cleansing function and the drying function continuously.



5. Nano silver ceramic MF filter

With the MF filter for the room water applied to the bidet, you can always wash with the filtered clean water.



6. Twin nozzle

As the rear cleansing nozzle and the front cleansing nozzle are separated, it is a hygienic.



DEAR CUSTOMERS

Thank you for using our Coway Bidet.

Please read this User's Manual to use and maintain the product correctly.

If you encounter a problem while using the product, you may solve the problem referring to the User's Manual. As this manual contains the product warranty card, please keep it in a safe place.

CONTENTS

FOR INFORMATION	
SAFETY INFORMATION	4
Electrical Safety	4
Installation Safety	5
Operation Safety	
Others	7
PARTS NAME	8

MAINTENANCE
INSTALLATION
CLEANING METHOD25
Nozzles25
Product Body25
Uninstallation the Product 26
MAINTENANCE27
Freezing Protection Function 27

FILTER REPLACEMENT METHOD28

HOW TO USE

KEEP IN MIND	.11
PREPARATIONS	.13
OPERATION/INDICATION PART	.14
HOW TO USE	.18
For Rear Cleansing	. 18
For Front Cleansing	. 19

OTHERS

FROUBLESHOOTING	29
SPECIFICATION	31
WARRANTY CARD	34

⁻ Please keep the User's Manual where it can be readily reached or found -

SAFETY INFORMATION

Be careful to keep this safety information.

Please read this information to prevent property loss and ensure your safety.



Danger

If not observed, serious injury or even death may occur as a result.



If not observed, serious physical injury or property damage may occur as a result.



If not observed, minor physical injury or property damage may occur as a result.

| Electrical Safety |



Do not use a damaged power cord or plug, and loose outlet.

Otherwise, electric shock or fire may occur as a result.



Please connect the power plug to a dedicated grounded electrical outlet.

> Otherwise, electric shock or fire may occur as a result.



Do not carry the unit by its power cord.

Otherwise, electric shock or fire may occur as a result.



Do not touch the power plug with a wet hand.

Otherwise, electric shock or fire may occur as a result.



Do not forcefully bend the power cord or put it under a heavy object to prevent it from being damaged or deformed.

Otherwise, electric shock or fire may occur as a result.



Do not connect and pull out the power plug repeatedly.

Otherwise, electric shock or fire may occur as a result.



If the electric outlet is wet, carefully unplug the unit and let the electric outlet completely dry before subsequent use.

Otherwise, electric shock or fire may occur as a result.



Unplug the product before repair, inspection, or parts replacement.

Otherwise, electric shock or fire may occur as a result.



Remove any dust or water off in the pin and contacts of the power plug.

Otherwise, electric shock or fire may occur as a result.



Do not plug into an outlet that is being used by several other appliances. Use an electrical outlet dedicated.

Otherwise, fire may occur as a result.







Danger

Warning Caution



When you don't use for a long time, close the main water supply valve and unplua.

> Otherwise, electric shock or fire may occur as a result.



Do not attempt to repair or modify the power cord at your discretion.

> Otherwise, electric shock or fire may occur as a result.



In the case the power cord is damaged, do not replace the cord yourself. Call Service Center to have it replaced.

> Otherwise, electric shock or fire may occur as a result.



Installation Safety



Do not install near a heating device.

> Otherwise, fire may occur as a result



Avoid installing the product in places where the air is damp, dust is accumulated, or water drops.

Otherwise, electric shock or fire may occur as a result.



Do not place or use the inflammable gases, nor the flammable materials near the product.

> Otherwise, electric shock or fire may occur as a result.



Use tap water as a main water.

> Industrial water or gray water, if used as main water, may cause skin damage or diseases.



Don't connect the main water to the warm water pipe.

> Otherwise, malfunctions or accidents may occur as a result (Make sure to connect to cold main water supply pipe).



After installation, make sure to check the water supply connections for leaks.

> Rubber packing should be applied to the connection hose.



Do not install the bidet in a location exposed to direct sunlight.

> Otherwise, deformation or discoloration may occur as a result.



SAFETY INFORMATION

Operation Safety



If the steam cleaner produces a strange noise, flaming smell, or smoke, immediately unplug from the electrical outlet and ca





Do not place an electric heater near the product or dispose of any flamed material such as lit cigarettes in the toilet.

Otherwise, fire or product deformation may occur as a result.



Do not insert a wire or sharp object in any gap of the product or the warm air outlet.

Otherwise, electric shock, fire, or product damage may occur as a result.



Do not place any containers with water, medicine, food, small metallic objects, or any flammable material on the top of the product.

In the case foreign material gets inside the product, electric shock, fire, product damage may occur as a result.



Do not use the product where excessive moisture exists or do not splash water on the product.

Otherwise, electric shock or fire may occur as a result.



Do not use the product if it is not working properly.

* Please unplug immediately, and call our service center after closing the main water supply valve.

Electric shock or fire may occur as a result.



Do not block the air dryer outlet with a hand.

Otherwise, burns or fire may occur as a result.



Please turn off the main water supply valve when you replace the filter.

Otherwise, electric shock or product damage may occur as a result.



For children, the elderly, and those who cannot adjust the temperature themselves or with sensitive skin, set the warm water temperature and seat temperature to "Low."

Otherwise, low temperature burns may occur as a result.

"Low temperature burns": It means burns inflicted by contacting temperatures 40 °C or lower for an extended period of time.



Do not use the bidet's control panel as a support or forcefully press it down.

Otherwise, product damage or malfunction may occur as a result.



Do not stand or place a heavy object on the seat cover.

Otherwise, product damage or malfunction may occur as a result.



Don't open/close the seat cover severely or lean.

Otherwise, product damage or malfunction may occur as a result.

It is opened and closed slowly as 'Soft seat open and close' methods.







Danger

ner Wa

Warning Caution



Exercise caution not to have urine touch nozzles, air dryer outlet, or outside surface of the product.

Otherwise, bad smell or malfunction may occur as a result.



If the product is not to be used for a long time, pull out the power plug from the electrical outlet, close the main water supply valve, and drain the water in the water tank.

(See P.26)

Others



While taking a shower or cleaning the bathroom, pull out the power plug from the electrical outlet and exercise caution not to have water or detergent splashed on the bidet.

Otherwise, electric shock or fire may occur as a result.

In the case foreign material gets inside the product, pull out the power plug from the electrical outlet, turn off the main water valve, and call the Coway Service Center.



Don't separate the bidet body and the bidet seat.

Otherwise, electric shock, fire, or product damage may occur as a result.





Do not disassemble, repair, or modify the product at discretion.

Otherwise, electric shock, fire, or product damage may occur as a result.





Don't pull out the bidet hose or the connection hose severely.

Otherwise, leaks or malfunction may occur as a result.



Unplug the system before you clean it and do not splash water directly on the bidet or don't use thinner, or benzene, chemicals, or hydrochloric acid detergent.

Otherwise, metal parts may corrode or the bidet body may have discoloration or scratch as a result.

* Use soft cloth or sponge to clean the bidet when you clea



This product is exclusively for use in a bathroom. Do not use the product for other purposes not specified in the User's Manual (for abnormal use not intended by the manufacturer).




PARTS NAME

Dimensions

The toilet dimensions must be within those shown below.


Do not install this product on a toilet that does not meet these dimensional requirements.

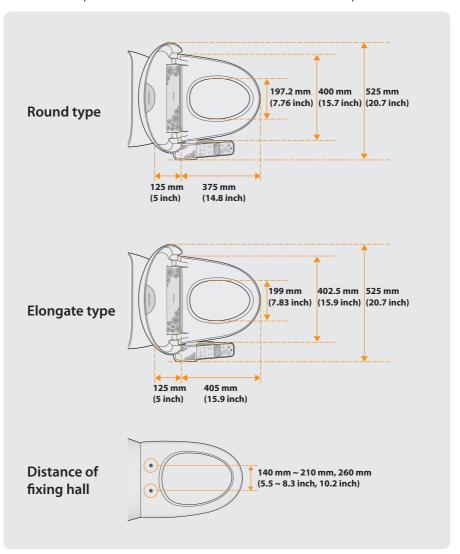

Front




Rear

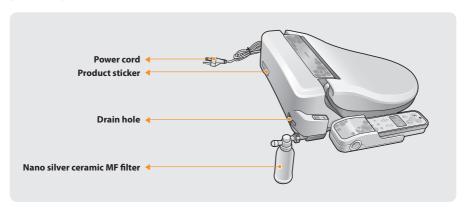

PARTS NAME

Installation Material

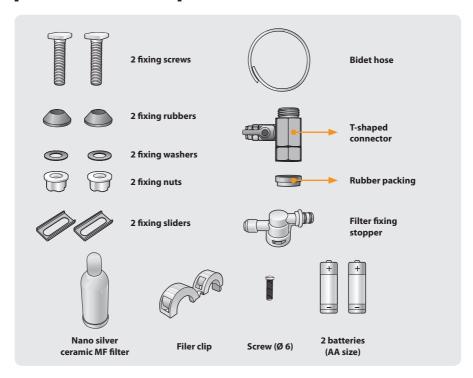

■ Grounding

This product must be grounded, in the event of an electrical short circus, ground reduces the risk of electrical hazards by providing an escape wire for the electric current. The power cord has grounding wire and a three-blade grounding plug (shown below). Do not use an adapter with the product's power plug, or use any other methods to connect the plug to an improperly configured outlet. The Power source to which the product connected must be 120 V~, 60 Hz with an minimum current rating of 7 A. The outlet must be properly installed and grounded, and have three slot receptacle (shown bellows). If it is necessary to use an extension cord, use only a three wire extension cord that has a three-blade grounding plug. The extension cord must be rated 125 V~, 7A.



Improper use of the grounding plug can result in a risk of electric shock.



KEEP IN MIND

■ Connect the power.


Turn on the product by connecting the power plug to the electrical outlet and pressing the power selection button on the control panel.

The bidet works normally only when the electricity is connected.



This product is for 120 V~. 60 Hz only

Please connect the power plug to a dedicated grounded electrical outlet for $120 \, \text{V}_{\sim}$, $60 \, \text{Hz}$.



Open the main water supply valve.

The main water must be supplied to operate the bidet normally.



Check whether the product is in power saving mode before use.

- When you set the bidet body power saving mode, if there aren't a seat sensor sensing and a button operation for 30 minutes, a warm water/seat temperature operates as 'Low' status and the power save mode is kept.
- In the power save mode, the power selection indicator is turned off.
- When you sit on the bidet seat or press the button on the control panel, a
 power selection indicator is turned on and the water/seat temperature is operated as the last setting.
- If you sit on the bidet seat or the power selection indicator doesn't be turned on even if you press the button on the control panel, as the power is turned off, use after pressing the power selection button and turning on the power.

Setting Special Mode

■ Setting/canceling power saving mode

- Turn on the remote control by pressing the power selection button on the remote control with pulling out the power plug, and plug in the power plug with pressing the rear cleansing function selection button of the bidet body (Alarm).
- 2) Press the rear cleansing function selection button on the remote control and select the desired status.
 - The alarm rings 1 time (ding): It means the release of the bidet body power save mode.
 - The alarm rings 2 times (ding ding): It means that the bidet body power saving mode was set.
- 3) When you select the wanted status and press the air dryer function selection button on the remote control, the selected setting is saved and it is switched to the waiting status (The alarm rings three times (ding ding ding)).

Setting/canceling seat sensor lock mode

- Turn on the remote control by pressing the power selection button on the remote control with pulling out the power plug, and plug in the power plug with pressing the rear cleansing function selection button of the bidet body (Alarm).
- 2) Press the front cleansing function selection button on the remote control and select the desired status.
 - The alarm rings 1 time (ding): It means the release of the seat sensor lock mode.
 - The alarm rings 2 times (ding ding): It means that the seat sensor lock mode was set.
- 3) When you select the wanted status and press the air dryer function selection button on the remote control, the selected setting is saved and it is switched to the waiting status (The alarm rings three times (ding ding ding)).



KEEP IN MIND

Setting/canceling silent mode

- 1) Turn on the remote control by pressing the power selection button on the remote control with pulling out the power plug, and plug in the power plug with pressing the rear cleansing function selection button of the bidet body (Alarm).
- 2) Press the stop button on the remote control and select the desired status.
 - The alarm rings 1 time (ding): It means the release of the silent mode.
 - The alarm rings 2 times (ding ding): It means that the silent mode was set.
- 3) When you select the wanted status and press the air dryer function selection button on the remote control, the selected setting is saved and it is switched to the waiting status (The alarm rings 3 times (ding ding ding)).

■ Setting/canceling remote control power saving mode

- 1) With the remote control turned on, press and hold the nozzle position 🔊 button for 5 seconds or more (The LCD screen blink).
- 2) When the nozzle position indicator is lightened on LCD screen, it means that the remote control power saving mode is set, and when it is turned off, it means that mode is released (See the following figure).
- 3) When you press any button on the remote control, it is switched to the waiting status with saving the setting.
- * With power saving mode on, the batteries on the remote control last longer.
- * The product is supplied with the remote control power saving mode set.

Power saving mode set screen



Power saving mode canceled screen





- ▶ When you press the power selection button on the remote control, the powers on the remote control and bidet body are operated simultaneously (But the button in the bidet body work regardless of the remote control).
- When the bidet body power selection indicator doesn't turn on even if you sit on the bidet seat, as the power is turned off, turn on by plugging in the power plug and pressing the power selection button.

PREPARATIONS



Λ

This product is for 120 V~, 60 Hz only.

Please connect the power plug to a dedicated grounded electrical outlet for $120 \, \text{V}_{\sim}$, $60 \, \text{Hz}$.



After installation

Check if there is a leak in the main water supply valve and the connection hose. You must insert the rubber packing between the T-shaped connection pipe and the main water supply valve.



■ Periodic filter replacement

It is important to replace the filter periodically for the clean rinsing. If the filter is overused beyond its service life, the filter performance deteriorates, resulting in cleansing water that is not filtered properly. Please keep the filter replacement cycle.

* Filter replacement cycle: Every 4 months.



If the bidet has not been used for a long time

When you don't use the product for a long time, use it after replacing the filter and cleaning the products such as an air dryer outlet, a nozzle, seat according to each cleaning methods (See P.26).






- If there is a foreign material or a water drop on the signal transmitter of the remote control or on the signal receiver of the control panel of the bidet's remote control, the remote control communication may be inhibited.
- ▶ The remote control may not work properly where there is strong light such as three-wavelength lamp light or strong electromagnetic waves are created.
- ▶ Remove the protective film from the control panel before use.



OPERATION/INDICATION PART

Remote Control Indication Part/Operation Part

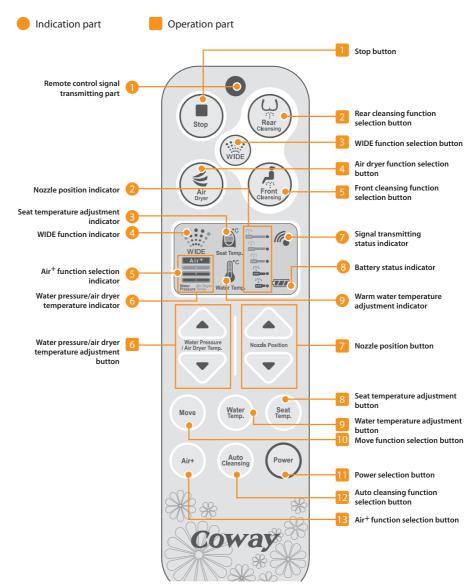

Indication part



Remote control signal transmitting part

It is the transmitting window that transmits signals when the remote control buttons are pressed.



Nozzle position indicator

If you press the nozzle position button, the lamp is turned on in 5 steps.



Seat temperature adjustment indicator

When you press the seat temperature adjustment button, you can adjust the indicator (L \rightarrow M \rightarrow H \rightarrow Off).



WIDE function indicator

When you press the WIDE function selection button, the indicator is turned on (Straight line \rightarrow step1 \rightarrow step2).



Air⁺ function selection indicator

When you press Air⁺ function selection button, the indicator is turned on.



Water pressure/air dryer temperature indicator

If you press the water pressure/the air dryer temperature adjustment button, the temperature lamp is turned on in the step1 \rightarrow step2 \rightarrow step3 order.

* It is used as the water pressure adjustment indicator when you operate the front cleansing/rear cleansing function, and it is used as the water temperature adjustment indicator when you operate the air dryer function.



Signal transmitting status indicator

It indicators that you transmit the signal.



Battery status indicator

The battery status indicator is turned off and on and it notifies the battery replacement time.



Warm water temperature adjustment indicator

When you press the warm water temperature adjustment button, you can adjust the temperature lamp ($L \rightarrow M \rightarrow H \rightarrow Off$).

OPERATION/INDICATION PART

Operation Part



Stop button

Stops all operating functions.



Rear cleansing function selection button

Use it to select the desired rear cleansing function.



WIDE function selection button

Use it if you want to control the water spraying range when you use the cleansing functions. You can select the range of the force of the flowing water of 3 steps in straight line \rightarrow step1 \rightarrow step2 order using WIDE function selection button. Whenever you press the button, the indicator of the selected current spraying range is turned on.



Air dryer function selection button

Use it to select the air dryer function. It helps dry the wet after using the front cleansing/rear cleansing function.



🔁 Front cleansing function selection button

Use it to select the cleansing function for woman.



Water pressure/air dryer temperature adjustment button

If you press the water pressure/the air dryer temperature adjustment button, the temperature lamp is turned on in the step1 \rightarrow step2 \rightarrow step3 order and 3 steps water pressure/air dryer adjustment can be performed.



Nozzle position button

Use when you want to adjust the nozzle position during the operation of the rear cleansing/front cleansing function. When you press the nozzle position button, you can adjust the nozzle position as 5 steps.



Seat temperature adjustment button

Use it when you want to adjust the toilet seat temperature. When you press the seat temperature adjustment button, you can adjust the seat temperature (L \rightarrow M \rightarrow H \rightarrow Off).

You can adjust the seat temperature regardless of the operation of other function.



Water temperature adjustment button

Use it when you want to adjust the water temperature. When you press the water temperature adjustment button, you can adjust the water temperature (L \rightarrow M \rightarrow H \rightarrow Off).



Move function selection button

Use it to select the movie function. When you press the move function selection button, as the nozzle is moved front and rear while you operate the front cleansing/rear cleansing function, you can clean the more wide areas.



Power selection button

Use it to turn the remote control and the product ON/OFF.

* When you press the power selection button during functions operation, the functions stop and the power is turned off.



77 Auto cleansing function selection button

Use it to select the auto cleansing function. When you press the auto cleansing function selection button, the rear cleansing 1 minute, the air dryer 2 minutes is operated successively.




🔁 Air+ function selection button

Use it to select Air⁺ function. When you press Air⁺ function selection button, as the air is mixed with the cleansing water during the rear cleansing/front cleansing function operation, it can clean with the more soft and strong force of the water.

* You can select the Air⁺ function regardless of the operation of other function.

Product Indication Part/Operation Part

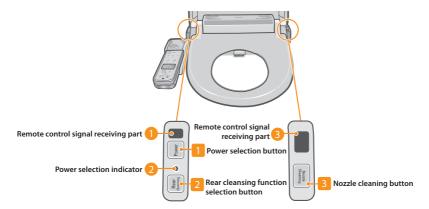

Indication Part

- Remote control signal receiving part It receives the signals from the remote control.
 - Power selection indicator
 - When the power is turned on, the indicator is lightened.
 - When you heat the water, the power selection indicator is turned on and off.
 - If the power selection indicator is turned on and off with the alarm, as it notifies the product abnormality, please pull out the power plug and call the service center.
- Remote control signal receiving part It receives the signals from the remote control.

Operation Part



Power selection button

Use it to turn the remote control and the product ON/OFF.

When you press the power selection button during the front cleansing/rear cleansing/auto cleansing function operation, the function only stop and the power isn't turned off.



Rear cleansing function selection button Use it to select the rear cleansing function.



Nozzle cleaning button

Use it when you want to clean the nozzle.

If you press the nozzle cleaning button, as the nozzle come forth and stop, you can clean conveniently (See P.25).

HOW TO USE

For Rear Cleansing

■ Rear cleansing

Sit on the seat and press the rear cleansing function selection button on the remote control.

The rear cleansing nozzle will remove the cold water remaining

- Inside the nozzle before the water stream is ejected so that you can have rear cleansing with water set to a desired temperature.
- The cleansing water is ejected for about 1 minute and then automatically stopped.
- An automatic nozzle cleaning is performed for about 5 seconds after cleansing when the nozzle retracts itself.
- * Adjust the nozzle position by pressing the nozzle position button.
- * Press the wide function selection button to adjust the desired water ejection range.
- * You can select the air mixed water type by pressing Air⁺ function selection button.
- * If the rear cleansing function selection button is pressed again while in cleansing operation, additional rear cleansing starts again for another 1 minute.
- * While in cleansing, users can adjust the water temperature, water pressure, and nozzle position according to their preference.

Move

Press the move function selection button on the remote control.

- The nozzle moves back and forth, providing a wider range of cleansing.
- * It will be worked continuously while the cleansing function is operated.
- * You can adjust the nozzle position by pressing the nozzle position
- * To stop the move function, press the move function selection button again.

Move

Air dryer

Press the air dryer function selection button on the remote control.

- Warm air blows for about 2 minutes to dry the wet part.
- * If you wipe out the wet before turning on the air dryer function, you can finish drying faster.
- * You can adjust the air dryer temperature by pressing the water pressure/air dryer buttons.
- * If the air dryer function selection button is pressed again while in drying operation, additional drying starts again for another 2 minutes.
- * If the air dryer function selection button is pressed while in cleansing operation, the cleansing function is stopped and drying starts immediately.



If you want to stop the operation in use, press stop button.

- It stops all operating functions.
- * The air dryer function is stopped in 2 seconds after pressing the stop button.





For Front Cleansing

Front cleansing

Sit on the seat and press the front cleansing function selection button on the

- The front cleansing nozzle will remove the cold water remaining inside the nozzle before the water stream is ejected so that you can have front cleansing with water set to a desired temperature.
- The cleansing water is ejected for about 1 minute and then automatically stopped.
- An automatic nozzle cleaning is performed for about 5 seconds after cleansing when the nozzle retracts itself.
- * Adjust the nozzle position by pressing the nozzle position button.
- * Press the wide function selection button to adjust the desired water ejection range.
- * You can select the air mixed water type by pressing Air⁺ function selection button.
- * If the front cleansing function selection button is pressed again while in cleansing operation, additional front cleansing starts again for another 1 minute.
- * While in cleansing, users can adjust the water temperature, water pressure, and nozzle position according to their preference.

Move

Press the move function selection button on the remote control.

- The nozzle moves back and forth, providing a wider range of cleansing.
- * It will be worked continuously while the cleansing function is operated.
- * You can adjust the nozzle position by pressing the nozzle position
- * To stop the move function, press the move function selection button again.



Air dryer

Press the air dryer function selection button on the remote control.

- Warm air blows for about 2 minutes to dry the wet part.
- * If you wipe out the wet before turning on the air dryer function, you can finish drying faster.
- * You can adjust the air dryer temperature by pressing the water pressure/air dryer buttons.
- * If the air dryer function selection button is pressed again while in drying operation, additional drying starts again for another 2 minutes.
- * If the air dryer function selection button is pressed while in cleansing operation, the cleansing function is stopped and drying starts immediately.




If you want to stop the operation in use, press stop button.

- It stops all operating functions.
- * The air dryer function is stopped in 2 seconds after pressing the stop button.







INSTALLATION

■ Installing the product

Tighten the fixing nuts firmly so that the bidet body won't be shaky on the toilet.



■ Product installation place

As the bidet should be installed on the toilet, take caution not to have water splashed on the bidet.



■ After installation

Keep the removed existing toilet seat in a shaded place to prevent its damage. $% \begin{center} \begin{center$



■ Cold water pipe

Please connect to the cold water pipe (If the product is connected to the warm water pipe, the filter and hose may be damaged).





- ▶ To secure the optimum performance of the product, consult with an installation expert for further installation.
 - There may be some water remaining inside the filter which was used to test the product during the inspection process at the factory.
 - The remaining water does not mean that the product was previously used.


Uninstallation Existing Toilet Seat

- 1. Remove the fixing nuts of the existing seat and separate the existing toilet seat 1 and the seat cover 2.
 - $**$ Keep the removed seat and the removed seat cover in a shaded place.



Installation the Product


 Turn off the main water supply valve ① on the water pipe and separate the existing water tank hose ②.



Connect the rubber packing, T-shaped connector, and water tank hose to the existing main water supply pipe. Please connect the bidet hose to the T-shaped connector.



- * Please insert the rubber packing between the water pipe and the T-shaped connection pipe necessarily.
- * Firmly rotate the nuts below and on top of the T-shaped connector to the end clockwise.
- 3. Please assemble by turning the MF filter on the filter holder to the arrow direction as the figure.
 - * If the filter is assembled loosely, the bidet may not function normally. Firmly connect the filter.



4. Please connect the filter assembled the filter holder in the rear of the product and fix using the filter clip.





It is not possible to separate the filter clip once it is fitted to the product.
When the problem occurs due to the filter clip, call the service center.




INSTALLATION

Installation the Product

5. Push fixing screw into the fixing slider. And slide the fixing slider with fixing screw to be hooked in the installation boad.



6. Insert fixing screw into the holes and pushfixing rubber, fixing washer into the fixing screw to prevent from wobbling of the main body. Then tighten up the fixing nuts.




▲ If you do not tighten nuts. It may cause injury or damage to customer.

- 7. Please connect the bidet hose to the filter fixing stopper.
 - * Please shorten the bidet hose as soon as possible. If the bidet hose is long, it may cause noises.



8. Open the main water supply valve.



- 9. Connect the power plug to the electrical outlet.
 - * Make sure to use a grounded electrical outlet. In the case of short circuit, grounding prevents electric shock or injury.



⚠ Make sure to use a dedicated electrical outlet with grounding terminals.



If it is unavoidable to use an extension cord, use one with grounding terminals for power rating of 125 V~, 7 A or higher.






- ➤ This installation method was explained on the basis of the case installed the remote control mount for the right hand.
- After removing the fixing screw and separating the product form the toilet, separate
 and install the remote control mount.

Installation the Remote Control Mount

1. Remove the fixing screw (Ø 6) that fixes the remote control mount on the bottom of the bidet.



2. Remove the remote control mount from the bidet.



3. On the opposite side of the remote control mount rotation axis, remove the screw that fixes the axis and the cover-axis.



4. Remove the cover-axis from the remote control mount.



23

INSTALLATION

Installation the Remote Control Mount

- 5. Insert the rotating axis in the opposite side after pulling out it from the remote control mount.
 - * Insert the axis with the thicker part facing the back of the remote control mount.





- 6. Insert the cover-axis in the hole on the opposite side of the rotating axis.
 - * Align two projections with the two grooves on the axis when inserting the cover-axis.



- 7. Fix the rotation axis and the cover-axis with a screw.
 - Please tighten the cover-axis firmly. If the screw is loosely assembled, the remote control mount may be separated and is dropped, which may cause product damage or a bodily injury.



- 8. Please separate the rubber stopper from the opposite side of the bidet installed the remote control mount before.
 - * Please be sure to insert the separated rubber stopper to the opposite remote control mount fixing groove. Otherwise, the product may break.



- 9. Insert the rotation axis of the remote control mount and fix the remote control mount with the fixing screw (Ø 6) on the bidet bottom.

Please tighten the fixing screw (Ø 6) firmly. If the screw is loosely assembled, the remote control mount may be separated and is dropped, which may cause product damage or a bodily injury.



CLEANING METHOD

Nozzles




- If excessive force is exerted on the nozzle when cleaning it, the nozzle may not be working properly or be broken. Hold the nozzle lightly to clean it.
- When you clean the nozzle, the nozzle cleaning water is sprayed (But the nozzle cleaning water doesn't be sprayed and only nozzle is extended in the feed water stop status).
- Press nozzle cleaning button on the right side of the bidet.


The nozzle cleaning water is sprayed and the front cleansing nozzle sticks out to its full length.

Clean the front cleansing nozzle.



- 2. Press nozzle cleaning button one more.
 - The nozzle cleaning water is sprayed and the front cleansing nozzle retracts itself, and the rear cleansing nozzle sticks out to its full length.
 - Clean the rear cleansing nozzle.









Product body

- Apply the neutral detergent to a soft cloth or sponge and clean the product.
 - * If you use the detergent except for the neutral detergent, the product deformation and the damage may be occurred.





A


Do not use thinner, or benzene. Do not clean the product using coarse scrub or detergent with abrasives.




CLEANING METHOD

Uninstallation the product


1. Unplug the power plug from the outlet.



2. Close the main water supply valve.




Place a big wash basin (1 L or more) under the rear drain hole of the bidet.



- 4. Turn the drain stopper to ① counter clockwise by 90° and pull out it in the direction of ② to remove it.
 - Please assemble the drain stopper to the product again after draining.



- 5. Please separate the product by removing the fixing nuts in the fixing screw and lifting the bidet.
 - Please pull out the power plug and separate the bidet hose from T-shaped connector before separating the product.
 - When storing the product, separate the filter fixed stopper and MF filter from the bidet and store them with installation materials.
 - Exercise caution not to lose fixing screws and fixing nuts.






When you don't use the product for a long time, unplug after turning off the main water supply valve and emptying the water inside the water tank.

MAINTENANCE

Freezing Protection Function

- Coway bidet has a built-in anti-freezing program. When the water temperature of the water tank falls below 5 °C, the heater automatically operates to prevent freezing burst.
 - * Check that the power is turned on. If the power is turned off, the anti-freezing program does not work and the bidet may have freezing burst or malfunctions in a cold environment.



FILTER REPLACEMENT METHOD

1. Please pull out the power plug and turn off the main water supply valve.



2. Separate the MF filter from the filter holder by rotating the MF filter to replace to the arrow direction.



3. Please rotate and insert new MF filter to the filter holder like the next arrow direction to the end not to be shaken.



4. Use it after opening the main water supply valve and plugging in the power cord.



TROUBLESHOOTING

The bidet may operate abnormally due to the minor causes not because of the product malfunction but because of the fact that the user is not familiar with the product use. In such a case, problems can be solved easily even without the help from the Service Center by checking the following items. If you can't solve the problem after checking the following items, please call the Service Center.

Symptom	Check	Measures to take
The product is not working.	Is the power plug connected to the electrical outlet?	Plug in the power cord.
	• Is it a power failure?	Check whether it is a power failure.
	Is the control panel turned off?	Check whether buttons other than the Power button work well. If one of the other buttons is pressed down, the Power button does not work. In this case, call our service center.
Water is not ejected.	Does the main water supply valve closed?	Open the main water supply valve.
	Is the nozzle clogged with foreign material?	Remove the foreign material by cleaning the nozzle opening with a toothbrush.
	After installation, water is not ejected.	Check whether the suspension of water supply is performed or not. (It takes about 1 – 2 minutes for the water tank to be filled with water after installation before water can be ejected.)
The water pressure is weak.	Is the water pressure set too low?	Adjust the water pressure properly.
	Is the nozzle clogged with foreign material?	Remove the foreign material by cleaning the nozzle opening with a toothbrush.
	Is the filter clogged with foreign material?	Replace the filter correctly.
The seat and water are not warm.	Isn't the seat and warm water temperature adjustment button set to "OFF" status?	Please adjust as the proper temperature by pressing the seat, the warm water temperature adjustment button.

TROUBLESHOOTING

Symptom	Check	Measures to take	
The air from the air dryer is cold.	Isn't the air dryer temperature adjustment button set to "OFF" status?	Please adjust as the proper temperature by pressing the air dryer temperature adjustment button.	
Water leaks in areas other than the nozzles.	Water leaks on the T-shaped connector.	Check that the rubber packing is inserted in the T-shaped connector and firmly tighten the nut again.	
	 Water leaks on the connection part of the bidet hose. 	Push the bidet hose to the connection part completely.	
	Water leaks on the filter.	Check whether the filter was damaged or not.	
Water comes out	What water comes out between the nozzles after cleansing is to clean the nozzles, not a malfunction.		
while the bidet is not in use.	toilet. It is that the water drops re	In some cases, water drops around the nozzles may fall down in the toilet. It is that the water drops remaining on the nozzle surface after the nozzle cleaning drop into the toilet. It is not a malfunction.	
If you plug in the power cord, the rear cleansing nozzle come out and go in.	It is the initialization process of the nozzle position, not a product malfunction.		
There is a noise coming from the bidet.	While the water heater is in operation, a noise is generated in a normal condition.		



- If the bidet is in power saving mode, as the seat and the warm water temperature are set to low temperature, it may be felt relatively cold when you sit on. If the bidet power saving mode is cancelled, the temperature set at the last use is maintained.
- For canceling the power saving mode, see page 11 on this manual.

SPECIFICATION

Product name		Coway Bidet	
Model name		BA08-AR/AE	
Power rating		120 V~, 60 Hz	
Power consumption		850 W	
	Water pressure	0.11 MPa - 0.68 MPa	
Product	BA08-AR	525 mm (W) X 500 mm (D) X 142 mm (H)	
dimensions	BA08-AE	525 mm (W) X 530 mm (D) X 142 mm (H)	
	Weight (NET)	5.7 kg - 6.3 kg	
	Rear cleansing	Maximum 0.7 L/min, automatic nozzle cleaning function	
	Front cleansing	Maximum 0.7 L/min, automatic nozzle cleaning function	
	Timing	Rear cleansing 1 min, Front cleansing 1 min	
	Water pressure control	Micom control, 3 levels control	
Warm water	Wide (spray range control)	3 level spray range control(straight-level 1-level 2)	
cleansing device	Air ⁺	Air mixed water type	
	Warm water temperature adjustment	4 levels (off : room temperature, low : 33 °C, medium : 36 °C, high : 39 °C)	
	Power consumption of cistern heater	800 W	
	Cistern capacity	1L	
	Safety device	Bi-metal, temperature sensor, temperature fuse(overheating prevention)	
	Warm air temperature control	3 levels	
Warm air dryer	Timing	Air dryer 2 mins	
wann an dryer	Power consumption of dryer heater	180 W	
	Safety device	Bimetal, temperature fuse(overheating prevention)	
	Seat temperature control (after seating)	4 levels (off : room temperature, low : 34 °C, medium : 37 °C, high : 40 °C)	
Warm seat	Power consumption of dryer heater	50 W	
	Safety device	Temperature sensor, temperature fuse(overheating prevention)	
MF filter	Life span	4 months (2.5 ton/month, impurity rate : under 0.5 NTU)	
Wir litter	Dimension	(L) 136 mm × (Ø) 48 mm	
Accessories	Installation materials	2 fixing screws, 2 fixing rubbers, 2 fixing washers, 2 fixing nuts, 2 fixing sliders, Bidet hose, T-shaped connector, Rubber packing, Filer clip, Filter fixing stopper, Nano silver ceramic MF filter, Screw (Ø 6), 2 batteries(AA size)	
Other function		Nozzle position adjustment, Move, Nozzle cleaning, Silent mode, Seat sensor lock, Bidet/remote control power saving mode, Remote control, Auto cleansing function	
	Temperature	0 °C - 40 °C	

- * These specifications may be changed to improve the performance of the product.
- * Earlier clogging may occur in MF filter depending on quality and consumption of water.



WARRANTY CARD OR WARRANTY LETTER ONE YEAR LIMITED WARRANTY BIDET BA08-AR/AE ("PRODUCT")

Model:
Serial Number:
Customer Name:
Date of Purchase:

("OWNER")

What This Warranty Covers:

Commencing with the date of purchase of the Product and continuing for a period of one year, if manufacturing defects in the Product cause the Product to not operate properly for its intended use, then subject to the exclusions, conditions, and limitations contained herein, COWAY at its sole option will repair or replace the Product.

Decisions as to the extent of repair or replacement required will be made solely by COWAY.

The remedy under this Warranty is available only for that portion of the Product exhibiting defects at the time of the warranty claim. The replacement Product as well as any remaining original Product will be warranted only for the original one year warranty period. This limited warranty applies only to Product used for an application specified by COWAY for the Product and applied in strict accordance with COWAY published specifications in effect at the time of application. IF PRODUCT IS USED FOR OTHER THAN ITS INTENDED PURPOSE, IT IS SOLD AS IS AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

What This Warranty Does Not Cover:

This Warranty warrants that the Product will be free from manufacturing defects which affect the ability of the Product to operate for its intended use; it is not a warranty that the Product will never require repairs or to undertake responsibilities, liabilities or obligations other than those specifically identified in the preceding section. COWAY is not responsible or liable for personal injury or property damage of any kind, even if arising from a breach of this Warranty.

Limitations and Exclusions:

TO THE EXTENT PERMITTED BY APPLICABLE LAW. COWAY DISCLAIMS ANY OTHER WARRANTY EXPRESS OR IMPLIED, THAN THAT PROVIDED FOR HEREIN, THIS WARRANTY IS IN LIEU OF AND EXCLUDES ALL OTHER WARRANTIES, GUARANTEES, CONDITIONS AND REPRESENTATIONS, EXPRESS OR IMPLIED, ORAL OR WRITTEN, STATUTORY OR OTHERWISE, INCLUDING BUT NOT LIMITED TO ANY IMPLIED CONDITIONS OR WARRANTIES AS TO THE MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OF THE COWAY PRODUCT. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. COWAY DOES NOT AUTHORIZE ANY PERSON INCLUDING ITS REPRESENTATIVES, TO MAKE ANY REPRESENTATION OR TO OFFER ANY WARRANTY. CONDITION OR GUARANTY IN RESPECT OF THE PRODUCT OTHER THAN THIS WARRANTY. THIS LIMITED WARRANTY SHALL BE THE OWNER'S SOLE AND EXCLUSIVE REMEDY AGAINST COWAY AND COWAY SHALL NOT BE LIABLE FOR ANY CONSEQUENTIAL, EXEMPLARY, SPECIAL, INCIDENTAL OR OTHER DAMAGES INCLUDING. BUT NOT LIMITED TO, LOSS OF PROFITS, AND LOSS OF USE. INCIDENTAL, CONSEQUENTIAL AND EXEMPLARY DAMAGES SHALL NOT BE RECOVERABLE EVEN IF THE REMEDIES OR THE ACTIONS PROVIDED FOR IN THIS WARRANTY FAIL OF THEIR ESSENTIAL PURPOSE, SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU, COWAY SHALL NOT BE LIABLE FOR ANY DAMAGES WHICH ARE BASED UPON NEGLIGENCE, BREACH OF WARRANTY, STRICT LIABILITY OR ANY OTHER LEGAL THEORY OF LIABILITY OTHER THAN THE EXCLUSIVE LIABILITY SET FORTH IN THIS WARRANTY.

Limitations on Implied Warranties:

Any implied warranty of merchantability or fitness for a particular purpose or use, shall be limited to the duration of the foregoing express written warranty.

Conditions of Warranty:

COWAY's continuing liability under this Warranty is conditioned upon the following:

- a) The defect or damage is not caused by or is the result of: abnormal use or conditions; improper storage, unauthorized modifications or repair; misuse, neglect, accident, alteration, improper installation or other acts that are not the fault of Coway or the manufacturer of the product or that are not covered by the manufacturer's warranty;
- The Product has not been altered, modified or repaired without prior written approval of COWAY;
- The OWNER has notified COWAY in writing of any failure of the Product covered by this Warranty within thirty (30) days following such failure;
- There has been no misuse, abuse or negligence with respect to the Product on the part of the OWNER.

Waiver:

COWAY's failure at any time to enforce or rely upon any of the terms or conditions stated herein shall not be construed to be a waiver of its rights hereunder.

Obtaining Warranty Service and OWNER'S Duties:

If the Product fails to operate for its intended purpose, then notify COWAY or its Representative Agency, within 48 hours or within the next business day after discovery of any defect in the Product. The OWNER must give written notice to COWAY no later than thirty (30) days after a defect is discovered or should by reasonable diligence have been discovered. Claims under this Warranty will require proof of purchase by the OWNER.

